









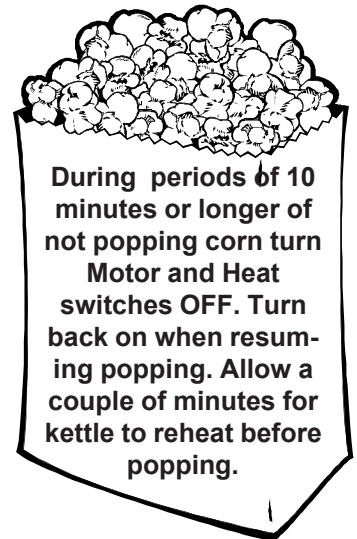
# Instructions for Using a Popcorn Machine Rented from *Herriott's*

## Getting Started:

-  Place machine on secure level surface.
  -  Plug machine into a 120 Volt 15 Amp **GROUND**ED power circuit. Be sure electrical source is sufficient to properly power machine.
- IMPORTANT!** DO NOT USE AN EXTENSION CORD!
-  When ready to begin - Turn machine switches on: **LAMP - MOTOR - HEAT.**
  -  **ON FIRST BATCH ONLY** - Let popcorn kettle heat about four (4) minutes before popping first batch.




## Popping Corn:

-  Pour pre-measured oil and seasoning into kettle, then add corn.
-  Dump kettle when about 99% of kettle contents are popped by rotating the handle of the kettle to dump the popcorn still in the kettle. There is a stop to prevent the kettle from being rotated too far. Return kettle to upright position.
-  To continue making popcorn repeat steps #1 and #2.
-  **ON FINAL BATCH ONLY** - Turn kettle Heat switch **OFF** as soon as corn starts popping rapidly.



## E-Z Cleanup:

### Pop Corn Machine:

-  After final batch - Turn all switches **OFF** and disconnect machine from power source.
-  Empty all popped corn from machine and remove kettle.
-  Clean machine (**NOT** kettle) with warm soapy water, then warm clear water and towel dry.

### Kettle:

-  Wipe off inside and outside of kettle with **DAMP** cloth.
- IMPORTANT!** DO NOT SUBMERGE KETTLE IN WATER!

*Thank you for renting from*

*Herriott's*  
Rents • Tents • Events

2100 South Neil • Champaign  
217/356-9713