 








 


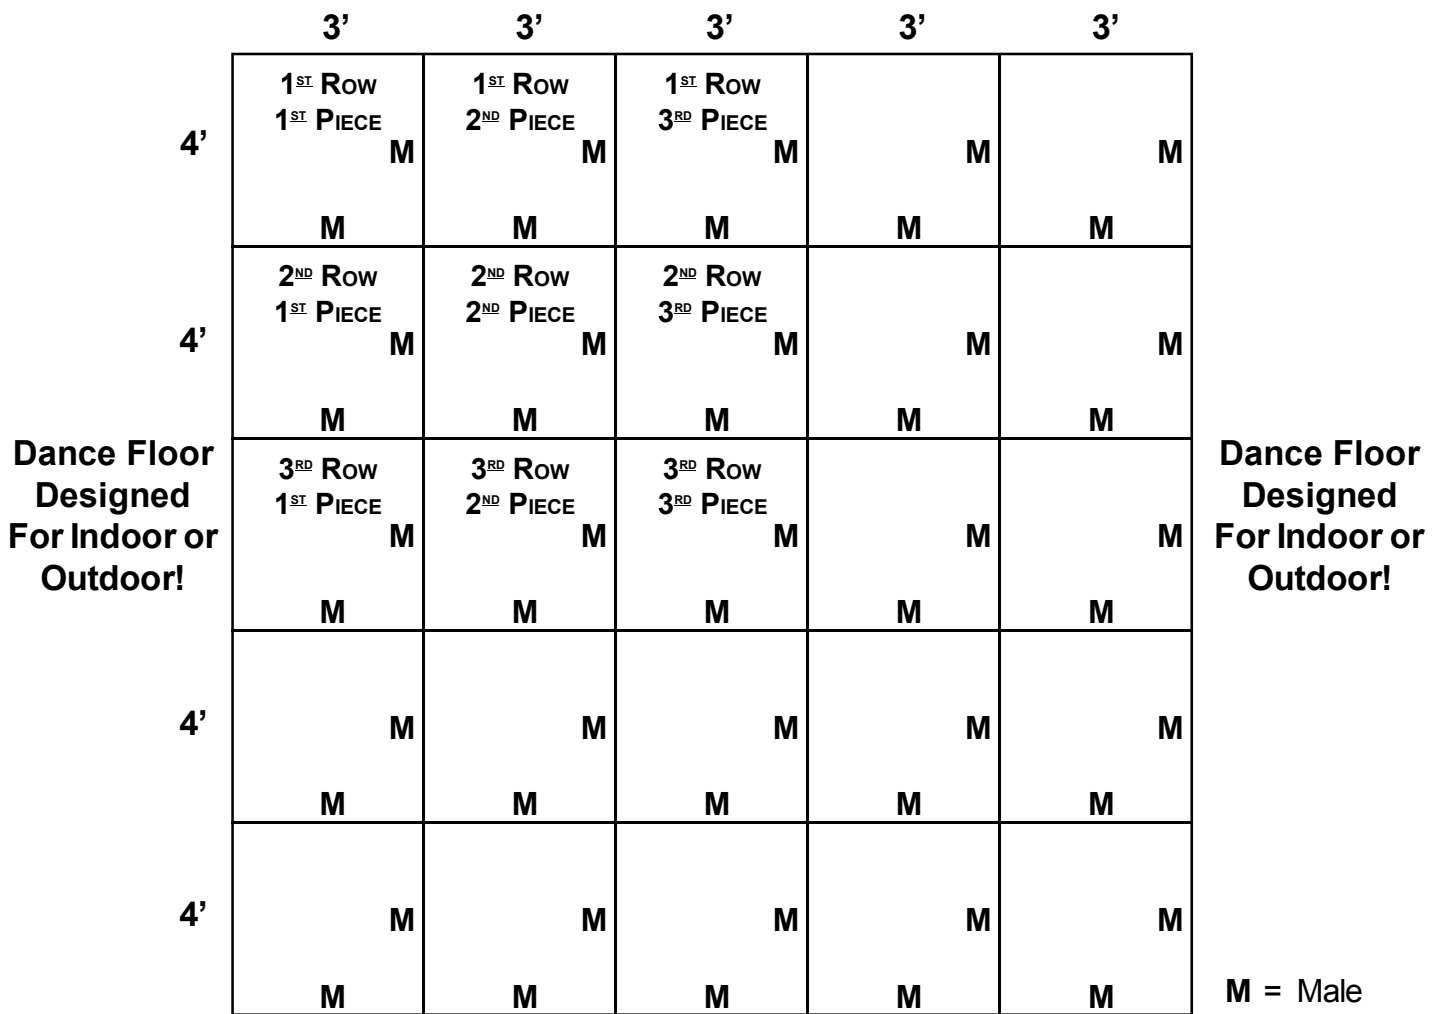

Woodgrain Vinyl Parquet Dance Floor Layout Guide and Assembly Tips



SETUP:
 Start at UPPER LEFT 1ST Row 1ST Piece with Male edge facing to the bottom and right, work to the right until completing first row then . . .
 Move to 2ND Row 1ST Piece and work to right until second row is completed then . . .
 Move to 3RD Row 1ST Piece and work to right until finishing third row and continuing on until floor size desired is completed.
 Once finished assembling dance floor panels - attach edging pieces - Again starting at the upper left corner.

SETUP TIPS:
 •Watch closely that Male (M) locations match diagram. •Attach each piece of paneling to previous panel by using the set screw. •Be sure each panel is locked in place to previous panel by turning set screw completely into adjoining piece(s) DO NOT OVERTIGHTEN! • When finished be sure that all set screws are flush with dance floor surface.

TAKEDOWN:
 Remove edging first then disassemble dance floor panel by panel. Once panel is disconnected from the next piece of panel run lock screw back flush into panel(DO NOT OVERTIGHTEN! (This helps to preserve floor while transporting).

MATERIALS LIST		# of Pieces
3' x 4' Dance Floor Panels		- _____
Corner Edging:		
		4' - 1
Right Female Corner		3' - 1
		4' - 1
Left Female Corner		3' - 1
		4' - 1
Right Male Corner		3' - 1
		4' - 1
Left Male Corner		
Straight Edging:		
		4' - _____
Female		3' - _____
		4' - _____
Male		3' - _____
Use Small Flathead Screwdriver for Floor Locks		

Thank you for renting from

Herriott's
 Rents • Tents • Events
 2100 S Neil • Champaign 217/356-9713